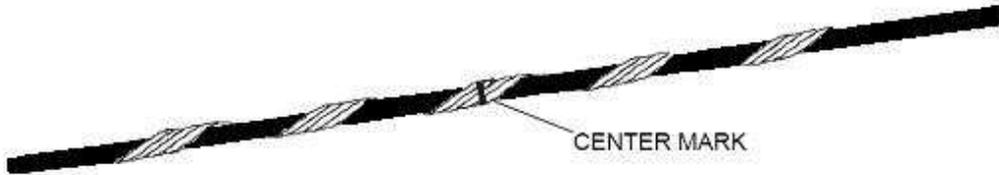


ADSS SHORT-SPAN SUSPENSION SET (1/2)

Structural Reinforcing Rods (SRR) Application Procedure

1

- 1** Begin at the center mark of the subset and wrap the subset by pulling the rod legs up and away from the cable. Wrap the rods of the first subset completely around the cable.

2

- 2** Align the center mark of a second subset with the first subset. Wrap the second subset on the cable two or three times leaving the ends loose. Apply remaining subset as outlined above.

3

- 3** To complete application of the SRR, use both hands to wrap subsets simultaneously into position. First wrap one end, then wrap the other end. To assure a strong reinforcement, **MAKE SURE THAT RODS ARE NOT CROSSED, AND THAT ALL RODS ARE EVENLY SPACED.**

ADSS SHORT-SPAN SUSPENSION SET(2/2)


TANGENT SUPPORT Application Procedure

4



4 The Tangent Support is supplied with the thimble inserted in its loop. Begin application by wrapping one leg over the SRR starting at the center mark.

5

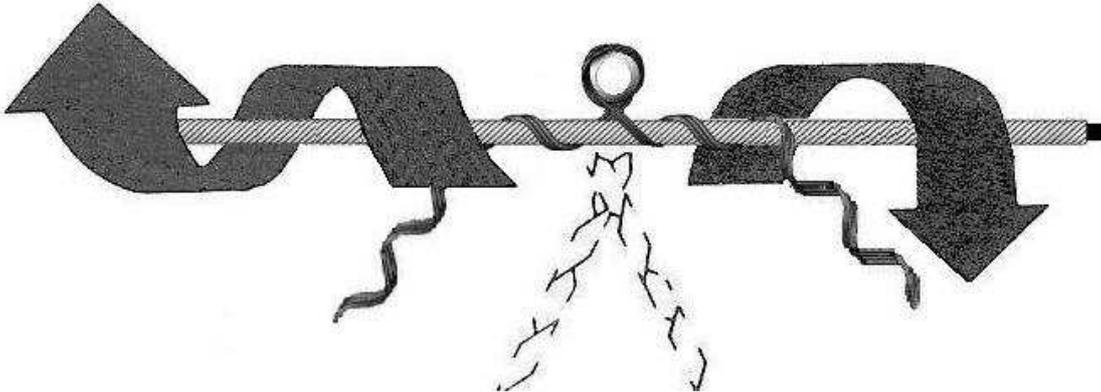

5 Continue wrapping the legs of the Tangent Support around the SRR making sure that the gaps between the legs are evenly spaced. Do not apply the last two pitches.

6



6 Completed application of ADSS SHORT-SPAN SUSPENSION SET.